



Golf GPS Watch



Table of Contents

About	3
Safety Instructions	3
Accessories	3
Instruction	4
Operation overview.....	5
Energy information	5
Operating Environment.....	5
Play Golf	6
Score Card	8
System Settings	9
Troubleshooting	10

About

This product is a high performance Golf GPS watch include thousands golf fields. Help you play golf handy with all you need to know. Auto search golf field for your location, Record your score and show the field obstacle in the front.

Safety Instructions

1. **There is a built-in Li-polymer battery inside. Keep it away from high temperature. Do not long exposure to the sun light.**
2. **In order to prevent corrosion, keep it away from humidity.**
3. **Do not disassemble, drop, or puncture with forces.**
4. **Never pour any liquid into it to avoid damages or electrical shock.**
5. **Do NOT use while driving or be in any situations or environments require concentration.**
6. **Contact your local waste department. There are many useful materials inside and it's recyclable.**

CAUTION

Danger of Explosion if battery storage on over 60 degrees Celsius (140 degrees Fahrenheit).

WARNING

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Accessories

1. Charge cable
2. Manual

Instruction



***Your product may look different from the above.**

***Make sure to receive GPS signal on the open sky.**

1. Power and Light

Press and hold 3 seconds to turn on or turn off the watch power.
Press to turn on or turn off the back light.

2. ESC and return

Return to last menu or escape the dialog.

3. Up

Choose the functions in the menu or select the target in the settings.
Long press for 3 seconds @ Play Golf mode to enter your score.

4. OK and enter

Enter the function or execute the setting.

5. Down

Choose the functions in the menu or select the target in the settings.

Long press for 3 seconds @ Play Golf mode to see the detail of the field obstacle or sun rise/fall time.

Power Input: This product uses standard USB (DC **5V 0.5A**) for power input. Do not use an adaptor without safety approval.

- ◆ It is recommended that charging the built-in Lithium-ion battery before use.
- ◆ Charging indicator shows BLUE while charging battery. The indicator turn off when charging completely.

Operation overview

Press Power Key for 3 seconds will power on the product. Press 3 seconds again will power off it.

You are welcome to Play Golf, Score card, Settings by press Up or Down button.

Press OK button will enter the function. Press Return button will go to the last menu or escape the dialog.

When you turn on the watch at first time, the time shows default day and time. Once you receive GPS signal on the open sky like play golf, the time will use GPS time on the watch. You can also manually change the clock in the settings.

Energy information

 
On mode < 0.4 W Standby mode < 0.05 W

Operating Environment

Operating Temperature: 0 to 45 degrees Celsius. (32 to 113 degrees Fahrenheit).

Operating Humidity: 20 to 80 percent relative humidity, non-condensing.

Play Golf

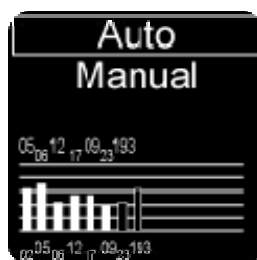

Press OK to enter the play golf mode. It starts with receiving GPS signal. This will take 30 to 50 seconds in order to allocate your location. Then show the golf fields near you. Chose the right field and play. Surely, you can manually choose your golf field as well.

Note:

Make sure to receive GPS signal on the open sky.



 
1. Current field hole number #.
2. Par for the hole.
3. There is a field obstacle in the front.
4. Distance to the front of the green. (Default unit is Yard)
5. Distance to the middle of the green. (Default unit is Yard)
6. Distance to the back of the green. (Default unit is Yard)

Go to the next or previous hole by press Up or Down button.

Long press Up button for 3 seconds @ Play Golf mode to enter your score.



Long press Down button for 3 seconds @ Play Golf mode to see the detail of the field obstacle or sun rise/fall time.

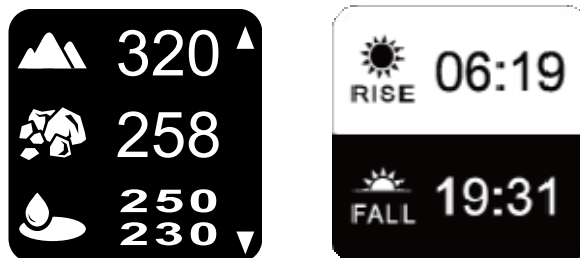

Long press OK button for 3 seconds @ Play Golf mode to see the distance for your shot.



 
When finish, press ESC to save the record and return to Time mode.



Score Card



Press OK to enter the score card mode. It shows the list of your records. Select the record you like to see and press enter. It shows the score for every holes.

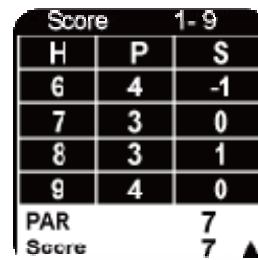

System Settings

Here come the options for the general operation settings.

Language	Choose the user interface language. Default is English
Clock	Setting clock option or set alarm here.
Backlight	Select backlight duration from 15 ~ 120 seconds. Default is 15 seconds
Alert	Select sound, light, vibrate alert mode respectively.
Unit	Choose Yard or Meter unit. Default is Yard
GPS	Receive GPS signal to set GPS time. You can check signal strength here.
Factory Reset	Reset watch to default value.
About	Show the version of watch.

Troubleshooting

1. **No Power:** Please attach the charge cable on the watch and plug in a USB for power. You will see the blue light on the watch while charging. Press power button for 3 seconds to turn on.
2. **No Signal:** In order to receive GPS, the watch is needed an open sky.
3. **No Sound:** Please check the alert option in settings whether the sound option is not checked.
4. **More Information:** Please contact your retailer for more information on this product.

