



ProNav x3

GPS Golf Watch

Quick Start and Instructions

Getting Started

Thank you for purchasing the *Lofthouse ProNav x3*.

To get started using your device, please follow the steps below.

1. Remove the plastic protective screen cover from the face of the watch with the time and date on it. It will just peel off.
2. Firmly Press and hold the Power, ①, button for 3 seconds to turn on the watch.
3. Press OK, ④, button twice to activate Golf mode. The watch will need 30 - 60 seconds to receive the GPS signal and pinpoint your location from an open outside area.
4. Choose the correct course and press OK, ④.
5. You are ready to hit the course!

NOTE: The watch needs to be in an open area in order to properly receive the GPS signal. It is a good idea to turn the watch on and acquire the signal a few minutes before you are scheduled to tee off.

Button Guide

There are five buttons on your Golf GPS Watch. Let's take a quick look at each.

NOTE: Buttons may need to be pressed firmly on the first use.



① Power and Light

To turn the watch on or off, hold button for 3 seconds. To turn on or off the backlight, simply press and release button.

② ESC and Return

To return to the last menu, press and release button.

③ Up

Use this button to scroll up in the Menu or Settings.

When in Play Golf mode, hold this button for 3 seconds to mark where you are playing a shot from to measure distance. When you arrive at your ball after hitting the shot, press and hold the OK, ④, button to see the distance of your shot.

④ OK and Enter

To accept an entry or to move forward on a menu, press button.

⑤ Down

Use this button to scroll down in the Menu or Settings.

When in Play Golf mode, hold this button for 3 seconds and you can see details regarding hazards which are in play on the current hole. These will appear on some courses.

Watch Menus

1. Press OK, (4), to enter main menu
2. Press Up/Down buttons, (3)/(5), to scroll the menu
3. Choose a mode and press OK, (4), to enter



Watch Settings



From Home Screen, Press OK, (4), to enter main menu. Use the Up/Down buttons, (3)/(5), to scroll to Settings. Once in Settings, you will find eight options:

- *Language* - Select your preferred default language
- *Clock* - Set an alarm, toggle between 12-hour and 24-hour mode, adjust your time zone, and more
- *Backlight* - Set the duration for the backlight to remain on
- *Alert* - Select either **Sound** or **Light** for your alert mode
- *Unit* - Toggle between Yards or Meters as unit of measure
- *GPS* - Search for GPS signal
- *Factory Reset* - Reset the watch to factory specifications
- *About Watch* - Watch version number

Golf Instructions

When playing golf, you will notice that there are six pieces of information displayed on the default screen. The list below explains what each of those pieces of information represents.



- ① Hole number
- ② Par for the current hole
- ③ Warning that there is a hazard in play on this hole
- ④ Distance to the back of the green
- ⑤ Distance to the middle of the green
- ⑥ Distance to the front of the green

The default unit is Yards. To switch the display unit, please refer to watch settings

Score Card Mode

To enter Score Card Mode, press OK, (4), while in Play Golf mode. Use the Up/Down buttons, (3)/(5), to adjust your score appropriately and press OK, (4), to confirm your score.

To access previous score cards, from the Home Screen use the Up/Down buttons, (3)/(5), to toggle to Score Card. Press OK, (4), and you will be presented with a list of your previous rounds.



Press (4) to enter the Score Card & record your score after each hole.



Hold (3) for 3 seconds to access Shot Distance. Mark your shot location and measure the length of your shots.



Hold (5) for 3 seconds to access the hazard screen.



To finish the round, press (2) to exit golf mode, then (4) to save the record, or press (2) to continue playing golf.

Troubleshooting


If any errors or malfunction occur, use a factory reset for troubleshooting. If that does not work try a hard reset by pressing ① + ② together, then press OK, ④, and hold all buttons for up to 10 seconds. Release all three buttons at the same time when refresh icon shows on screen.

Software Updates

To register for your warranty and download the latest version and course updates, please visit LofthouseGolf.com.

Charging the Watch

Attach the Charging Pins to the watch Charging Port, located on the side of the watch. Be sure the pins are aligned.

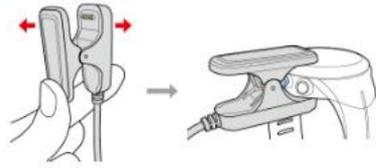

Insert the USB end of the charging cord into a computer USB port or CE certified 5V output USB charger. The blue light and charging screen will turn on to show that the watch is charging.